


# Instructions

**COOL**

COOL GUY

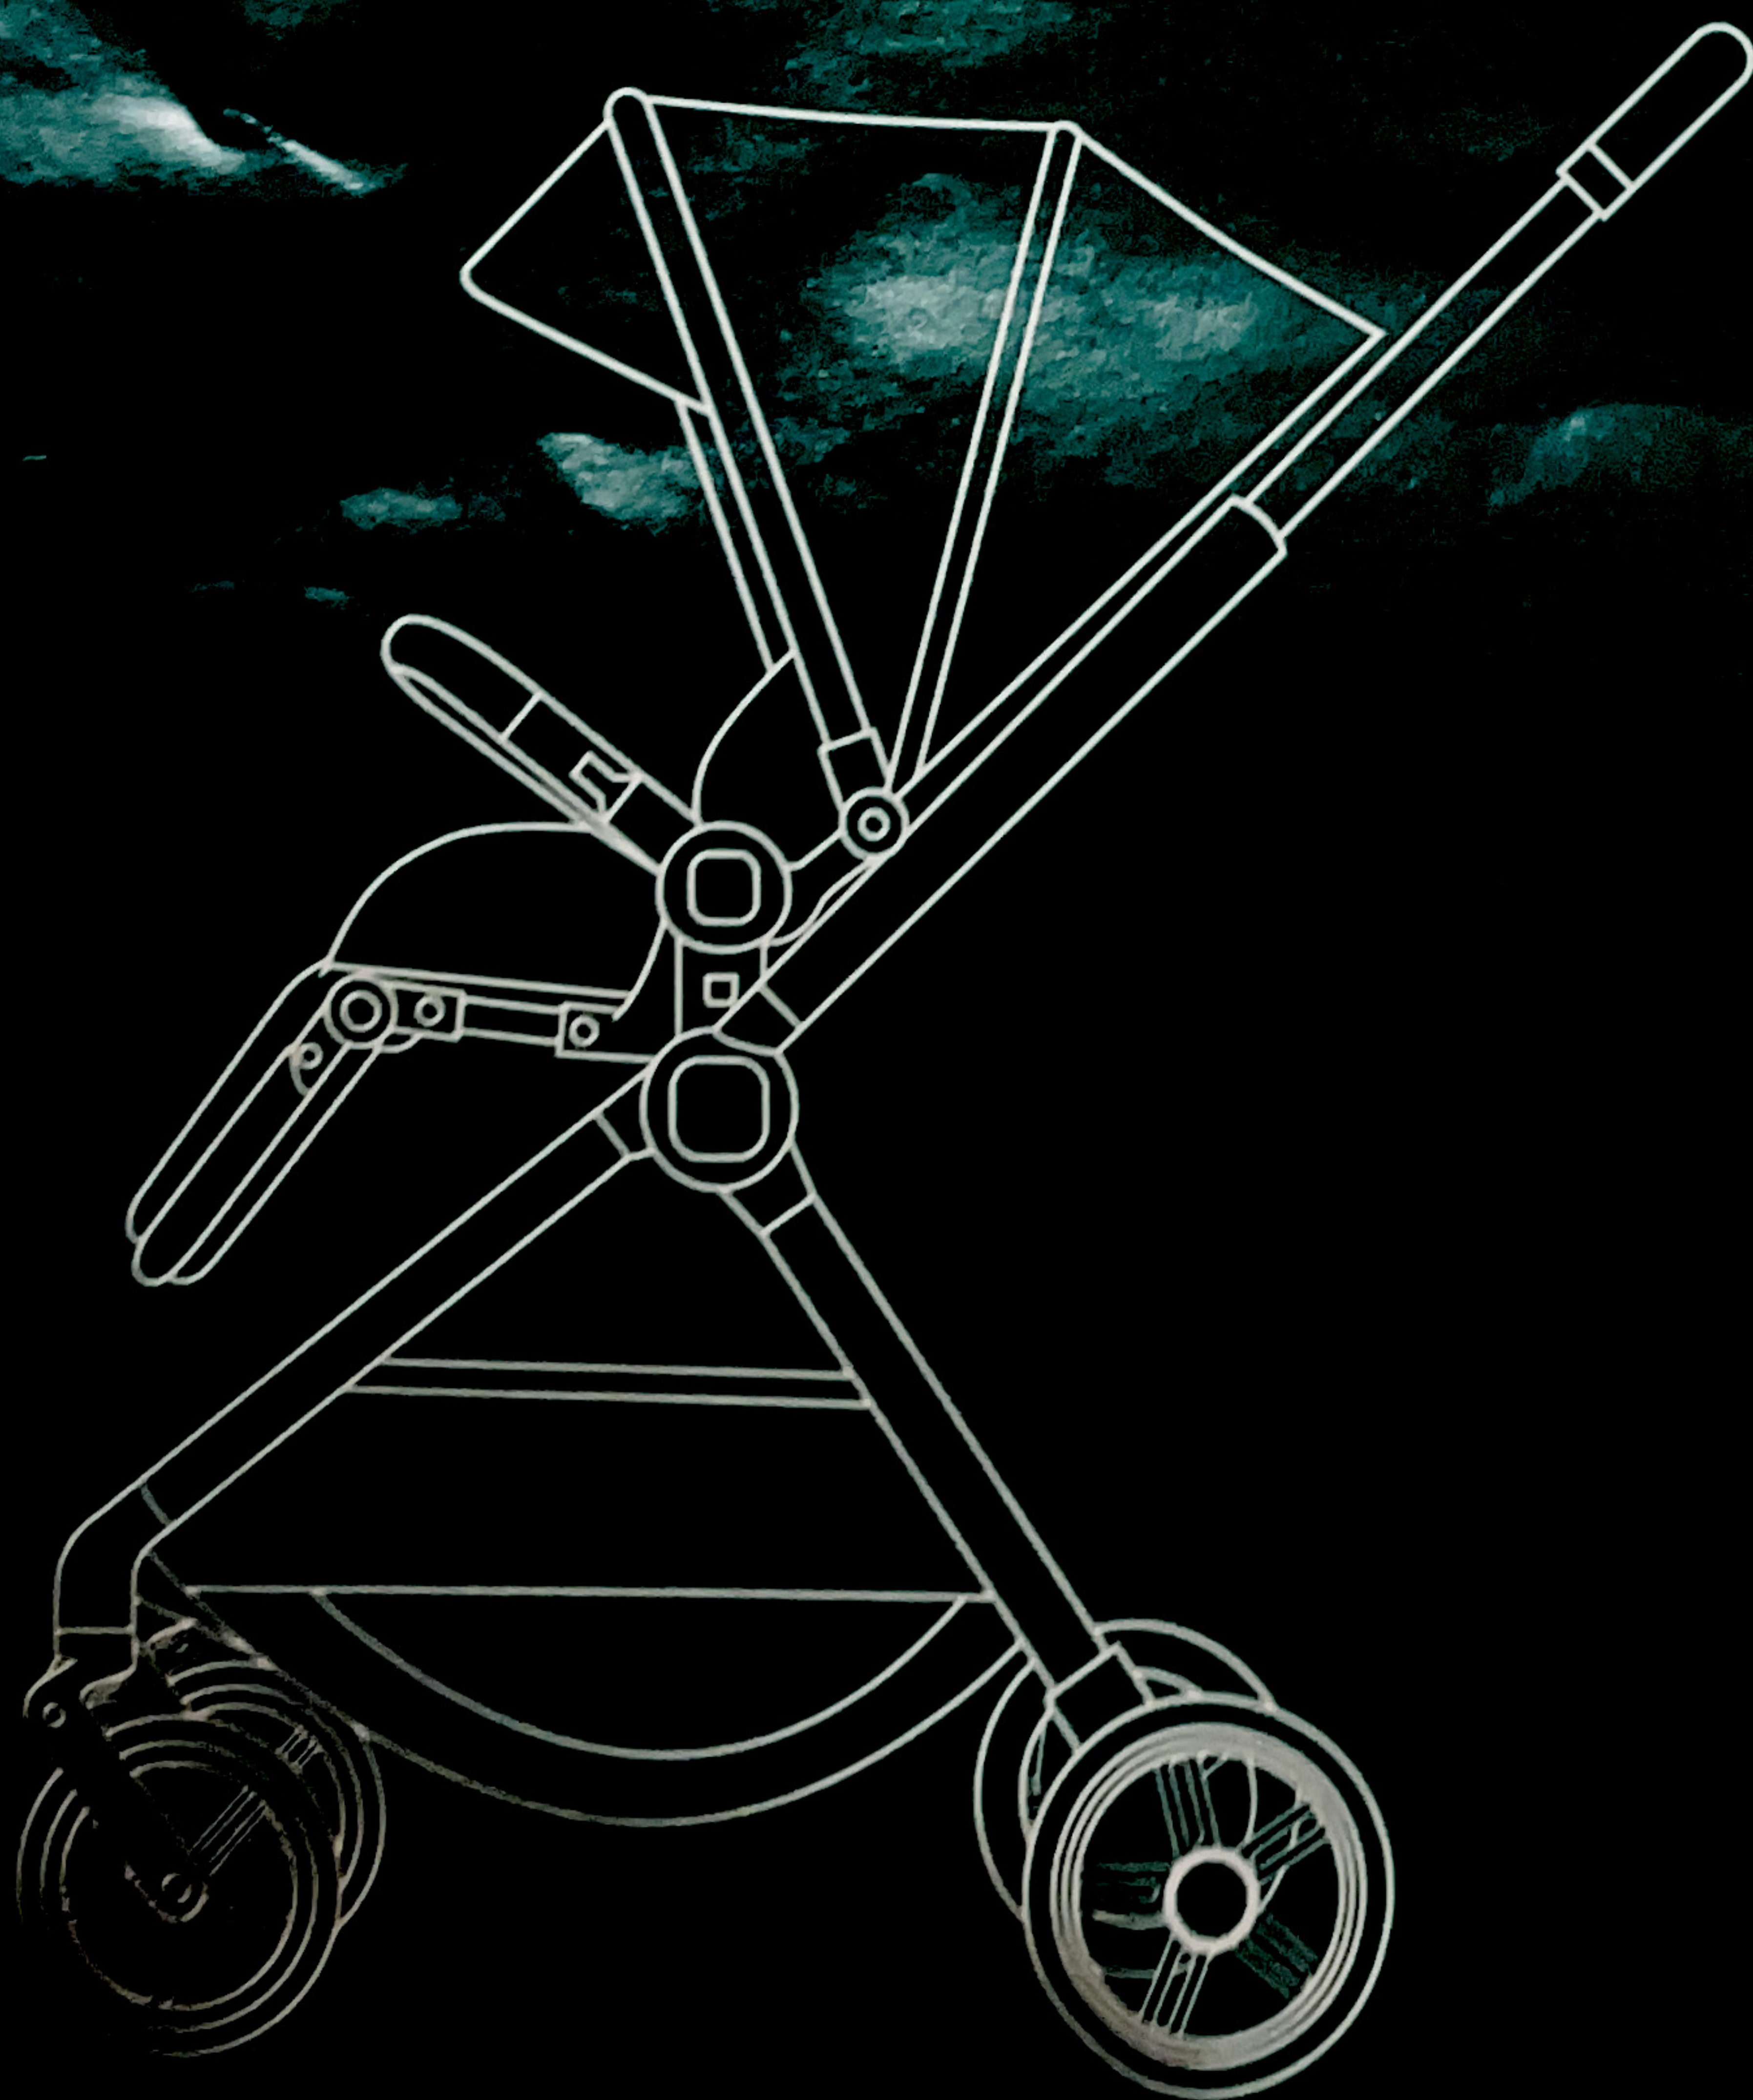



## 1 OPEN THE FRAME

1. (AS PICTURED 1,2) OPEN THE FRAME ALONG THE DIRECTION OF THE ARROW UNTIL YOU HEAR "CLICK" (AS PICTURES 3). AND VERIFY THAT THE FRAME IS FULLY LOCKED IN PLACE.



①



②



③

## 2 INSTALL/REMOVE THE FRONT WHEEL

1.(AS PICTURED 4) INSERT INTO THE PLASTIC HOLE OF THE FRONT WHEEL HOLDER UNTIL IT LOCKS AND DOES NOT COME OFF. INSTALL THE OTHER FRONT WHEEL IN THE SAME WAY.

2.(AS PICTURED 5) THE FRONT WHEELS DIRECTION BLOCK SLICES DOWNWARD, THEN THE FRONT WHEEL DIRECTION BLOCK CAN NOT ROTATE. THE FRONT WHEELS

DIRECTION BLOCK SLICES UPWARD, THEN THE FRONT WHEEL CAN ROTATE 360 DEGREES.

3.(AS PICTURED 6) PRESS DOWN THE PATCH AND PULL OUT THE FRONT WHEEL BY HAND, THE FRONT WHEEL DISASSEMBLED. REMOVE THE OTHER FRONT WHEEL IN THE SAME WAY.



④



⑤




⑥

03


## 3 INSTALL/REMOVE THE REAR WHEEL

1. (AS PICTURED 7) INSERT INTO THE PLASTIC HOLE OF THE REAR WHEEL HOLDER UNTIL IT LOCKS AND DOES NOT COME OFF. INSTALL THE OTHER REAR WHEEL IN THE SAME WAY.

2.(AS PICTURED 8) PRESS DOWN THE PATCH AND PULL OUT THE REAR WHEEL BY HAND, THE REAR WHEEL DISASSEMBLED. REMOVE THE OTHER REAR WHEEL IN THE SAME WAY.

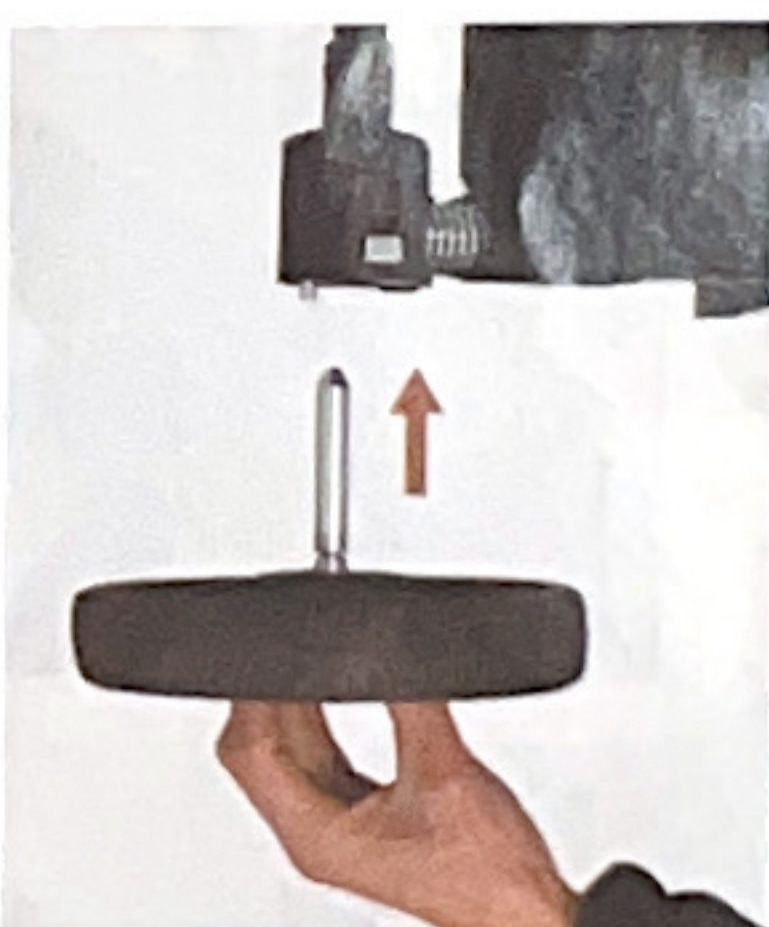

⑦

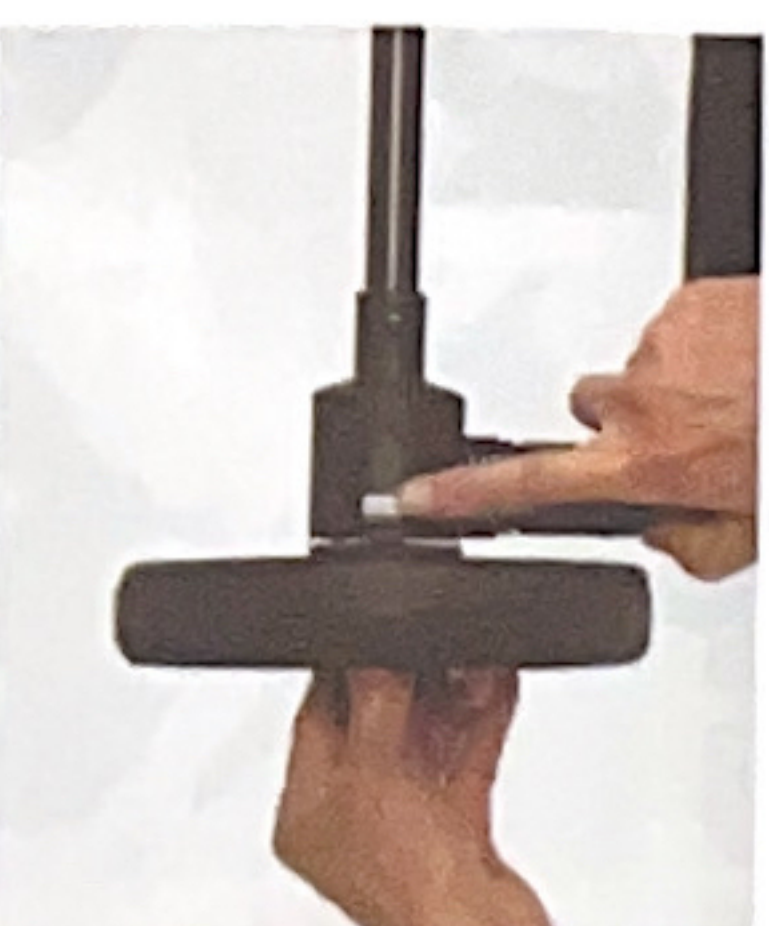

⑧

## 4 OPEN THE SEAT

1.(AS PICTURED 9) OPEN THE SEAT ALONG THE DIRECTION OF THE ARROW UNTIL YOU HEAR "CLICK". AND VERIFY THAT THE SEAT IS FULLY LOCKED IN PLACE (AS PICTURED 10).

2. (AS PICTURED 10) OPEN THE FRONT ARMREST ALONG THE DIRECTION OF THE ARROW UNTIL YOU HEAR "CLICK". AND VERIFY THAT THE FRONT ARMREST IS FULLY LOCKED IN PLACE (AS PICTURED 10).



⑨



⑩




⑪

04




## 5 (FORWARD, RESERVE) INSTALL SEAT, REMOVE SEAT

1. FORWARD INSTALLING SEAT (AS PICTURED 12) CLAMP THE SEAT TO THE FRAME IN THE DIRECTION INDICATED BY THE ARROW, AND VERIFY THAT SEAT IS FULLY COMPLETELY LOCKED IN PLACE.
2. REVERSE INSTALL SEAT (AS PICTURED 14) CLAMP THE SEAT TO THE FRAME IN THE DIRECTION INDICATED BY THE ARROW, AND VERIFY THAT SEAT IS FULLY COMPLETELY LOCKED IN PLACE.
3. (AS PICTURED 15) PRESS THE SEAT LOCK BUTTON AND PULL THE SEAT UP WITH HAND. REMOVED THE SEAT COMPLETELY.

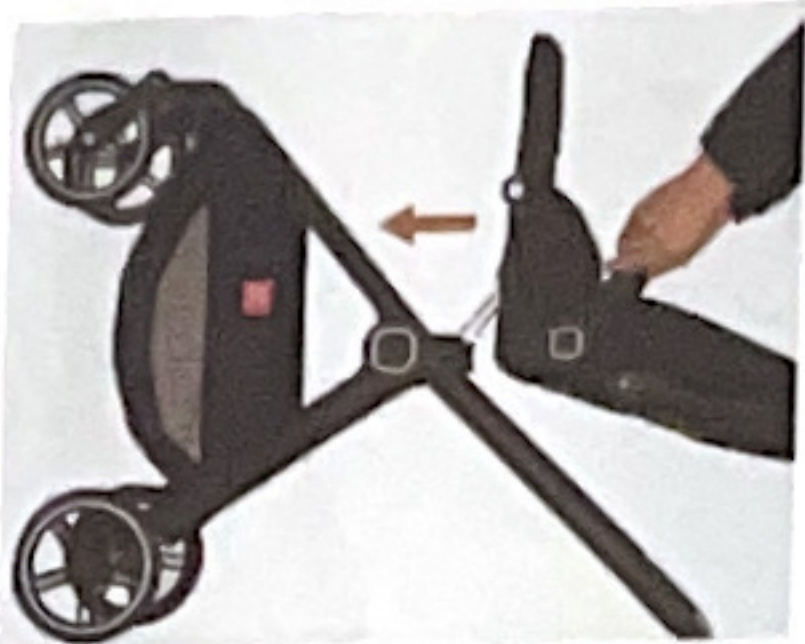

12

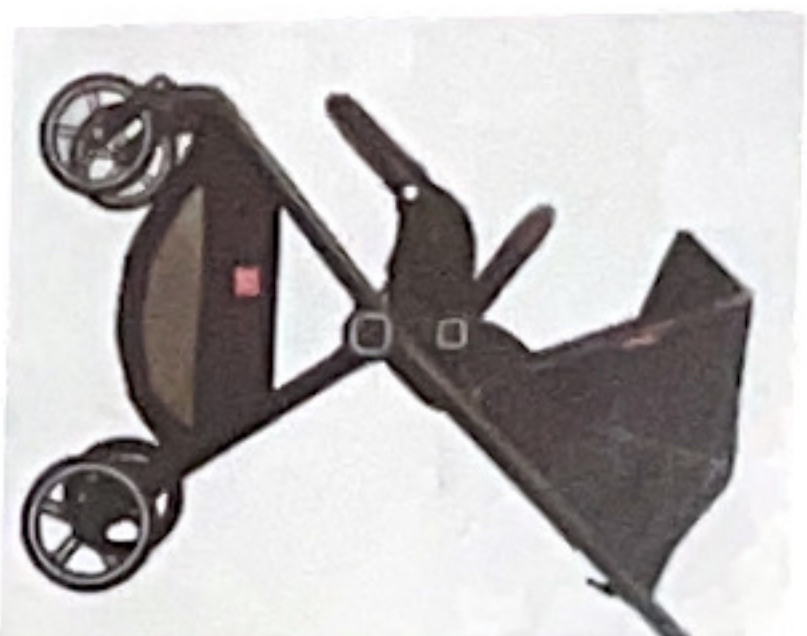

13



14



15

## 6 INSTALL/REMOVE/OPEN THE FRONT ARMREST


1. (AS PICTURED 16) INSERT INTO THE BOTH SIDE PLASTIC HOLE OF THE FRONT ARMREST HOLDER UNTIL YOU HEAR "CLICK". AND VERIFY THAT SEAT IS FULLY COMPLETELY LOCKED IN PLACE.
2. (AS PICTURED 17) PRESS FRONT ARMREST LOCK BUTTON AND PULL OUT THE ARMREST OUTWARD WITH HAND. REMOVED THE ARMREST COMPLETELY.
3. (AS PICTURED 18) PRESS FRONT ARMREST LOCK BUTTON AND PULL OUT ONE SIDE OF THE ARMREST OUTWARD WITH HAND. AND THEN OPEN THE FRONT ARMREST.



16



17

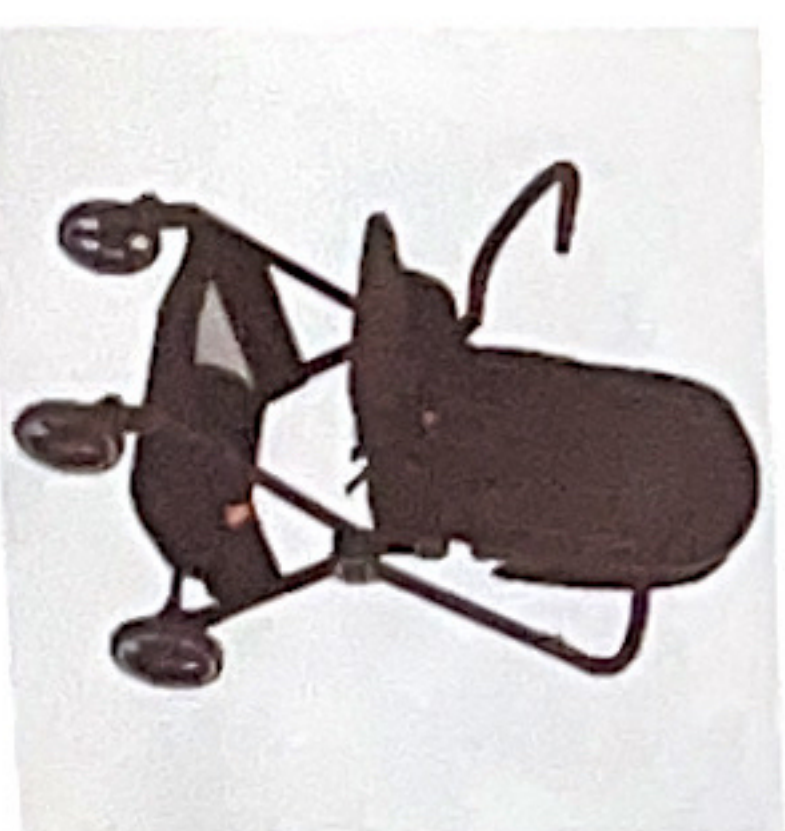

18

## 7 RETRACTABLE/ADJUSTABLE OF THE HANDLE

1. (AS PICTURED 19) THE HEIGHT OF HANDLE CAN BE ADJUSTED BY PINCHING THE HANDLE INWARD (AS PICTURED 20)




19



20

## 8 SEAT BACK ANGLE ADJUSTMENT

1. (AS PICTURED 21) PULL THE BACKREST ADJUSTING HANDLE TO ADJUST THE ANGLE OF THE SEAT BACK UP AND DOWN (AS PICTURED 22).

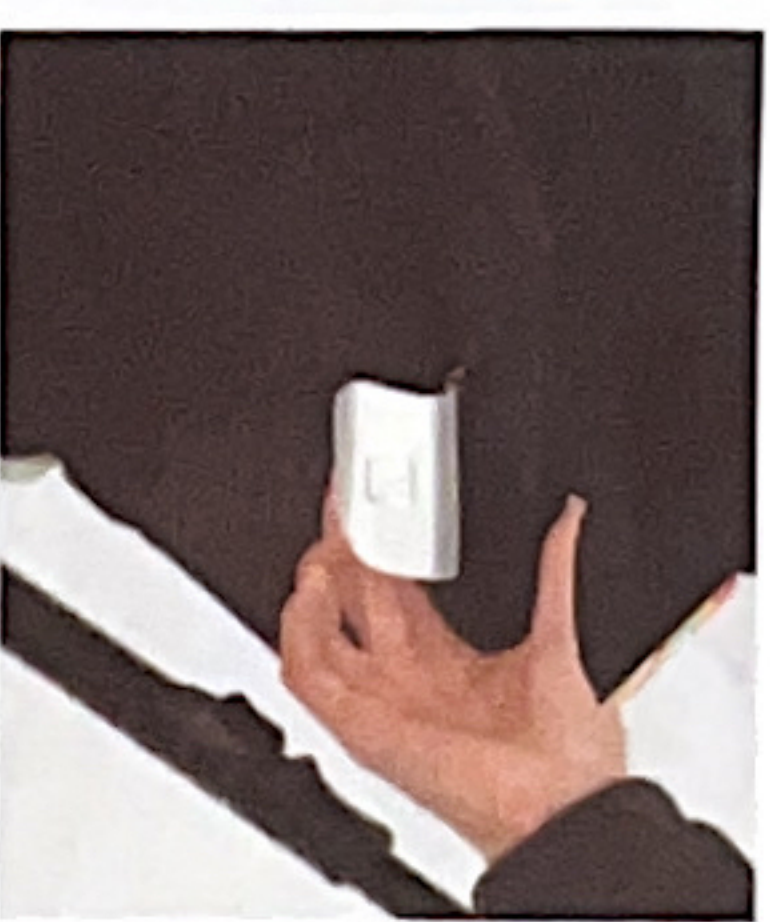

21



22

## 9 ADJUSTMENT OF CANOPY OPENING AND CLOSING

1. (AS PICTURED 23) THE CANOPY CAN BE ADJUSTED ALONG WITH THE ARROW DIRECTION.




23



## 10 LEGREST ADJUSTMENT


1. (AS PICTURED 24) PRESS THE BOTH SIDE LOCK BUTTON TO ADJUST THE ANGLE UP AND DOWN

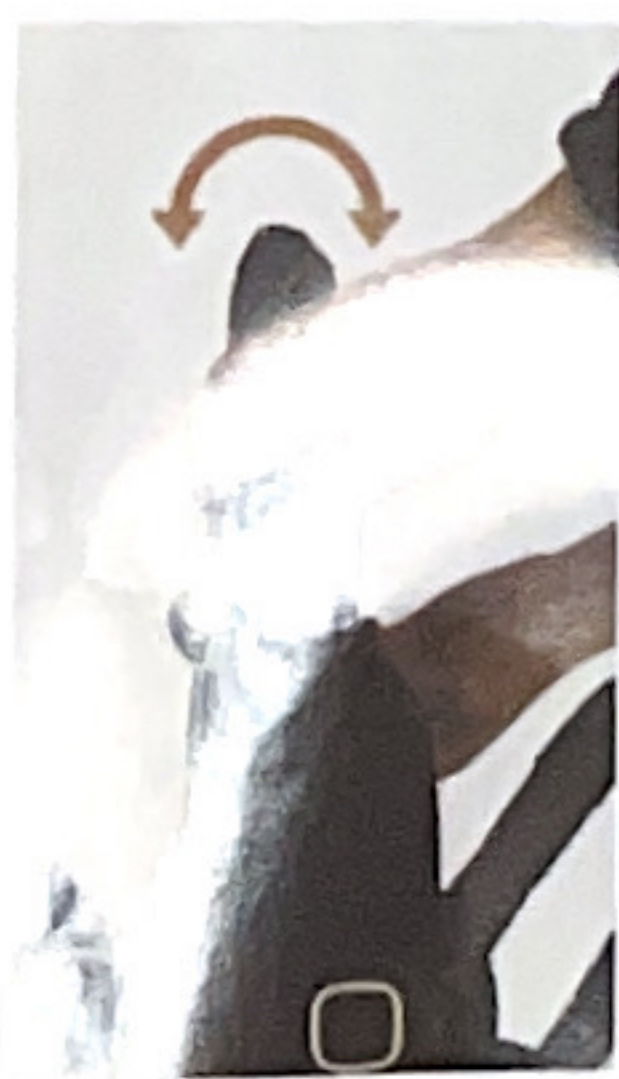

24

## 11 USE THE FIVE-POINT SAFETY BELT

1. (AS PICTURED 25) FASTENING: FIRST, PUT THE SAFETY BUCKLE PLUG 1 ON THE SAFETY BUCKLE PLUG 2, AND THEN INSERT THE LEFT AND RIGHT COMBINED SAFETY BUCKLE PLUG INTO SOCKET UNTIL YOU HEAR "CLICK" SOUND CAN BE LOCKED. OPENING: PRESS THE SOCKET BUTTON TO OPEN THE PLUG. ADJUSTMENT LENGTH: PULL THE ADJUSTMENT BUCKLE UP OR DOWN TO ADJUST THE LENGTH.

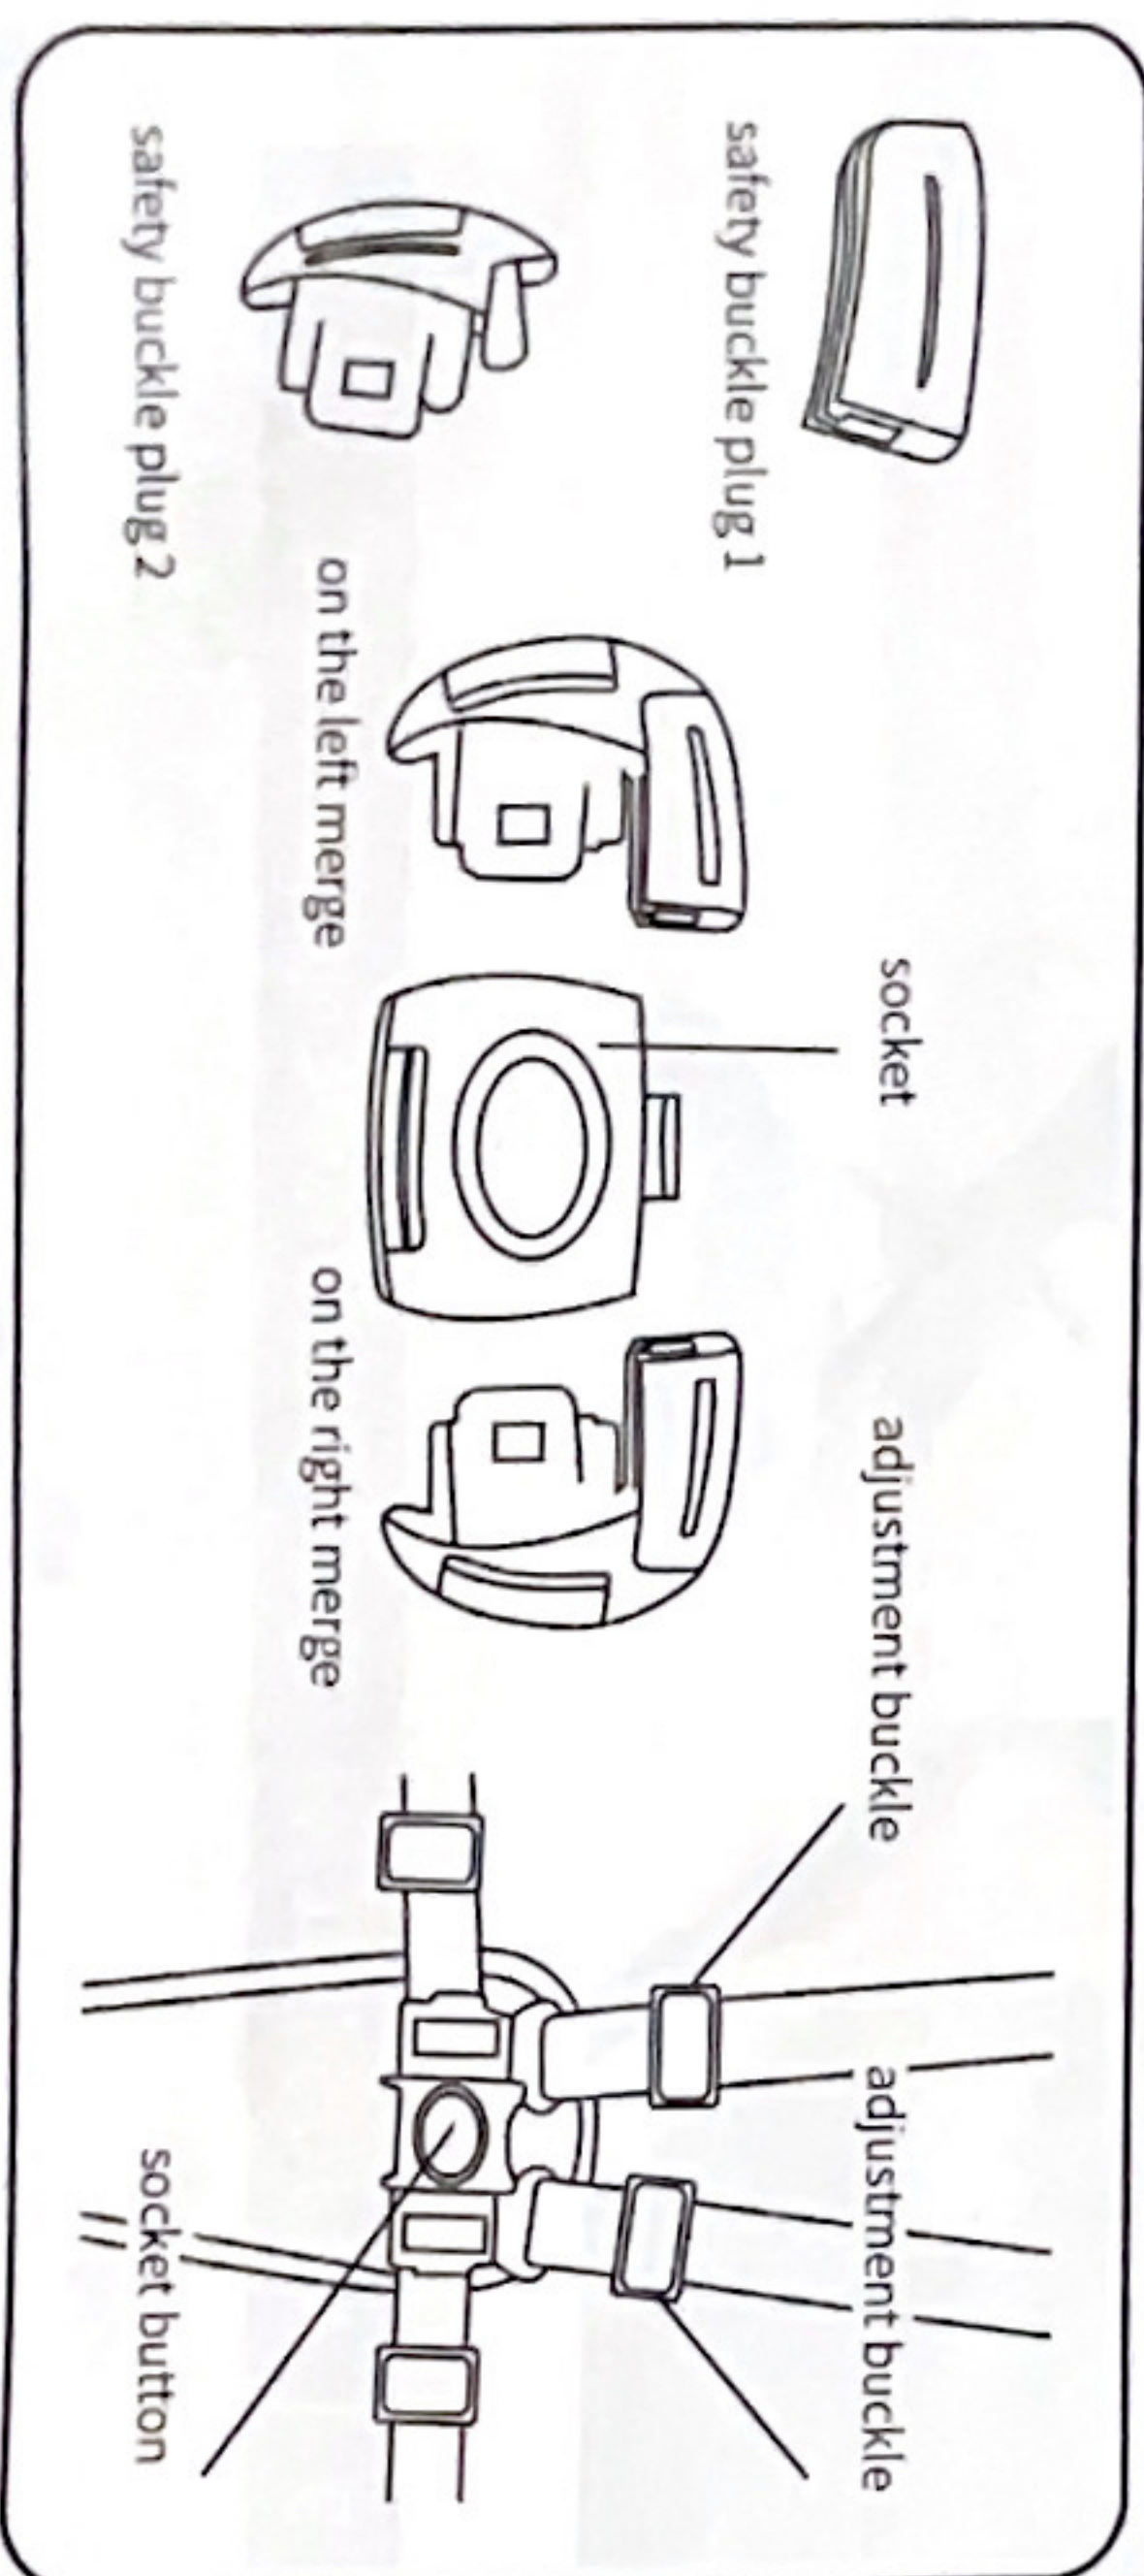


25

## 12 BRAKE OPERATION

- (AS PICTURED 26) PRESSED DOWN THE BRAKE AND THE REAR WHEELS WERE BRAKED. LIFT UP THE BRAKE FOR THE RELEASE OF STATE AND STROLLER CAN BE MOVED NORMALLY. (WARNING: THE BRAKE MUST BE APPLIED TO ENSURE SAFETY WHEN THE CHILD IS PUT INTO OR LIFT OUT OF THE STROLLER.)

07

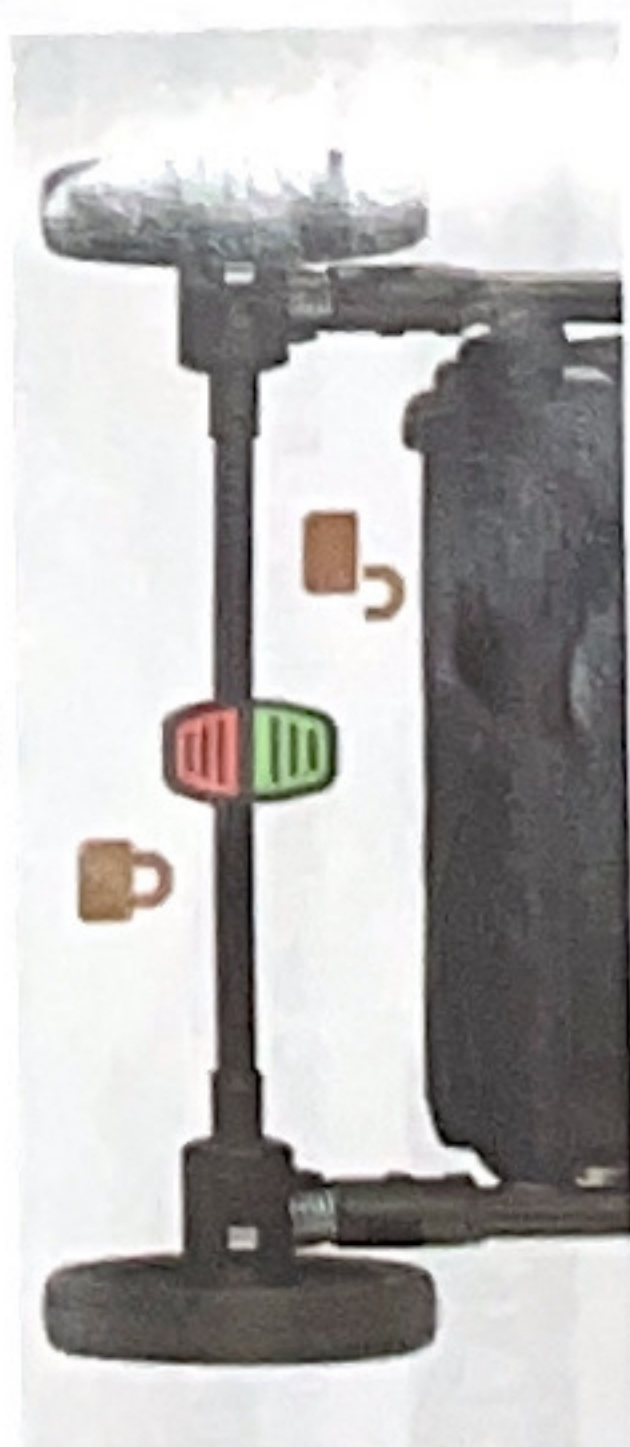


26

## 13 SEAT FORWARD FOLDING OPERATION

1. (AS PICTURED 27) PULL THE BACKREST ADJUSTING HANDLE TO TURN THE BACK OF THE SEAT FORWARD (AS PICTURED 28).
2. (AS PICTURED 29) AFTER ADJUSTING THE HEIGHT OF THE HANDLE BAR TO THE LOWEST POSITION, PRESS THE SECOND LOCK ON THE RIGHT HAND AND PULL UP THE HANDLEBARS BOTH SIDE OF THE HANDLE UNTIL THE HANDLEBAR IS PLACED (AS PICTURED 30).
3. (AS PICTURED) PULL UP THE HAND IS COMPLETION OF THE FORWARD FOLDING STROLLER (AS PICTURED 32,33).



27

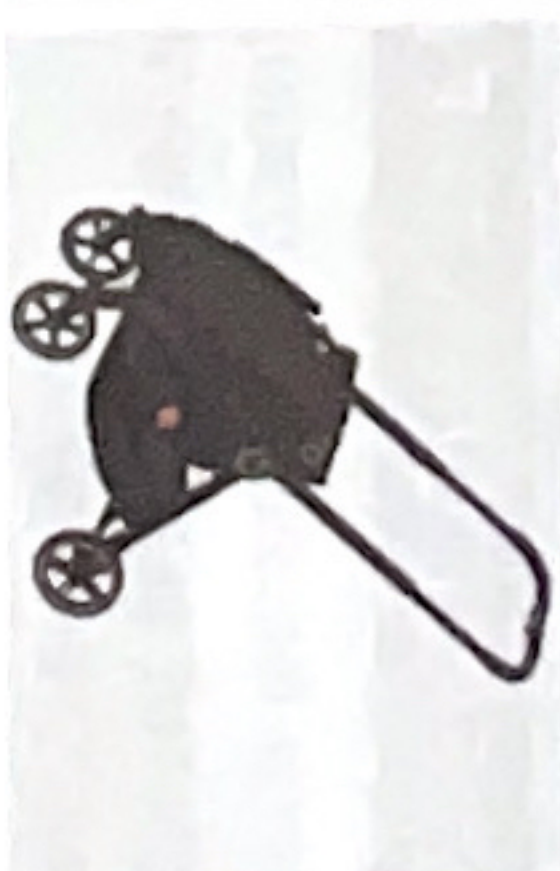

28




29




30



31

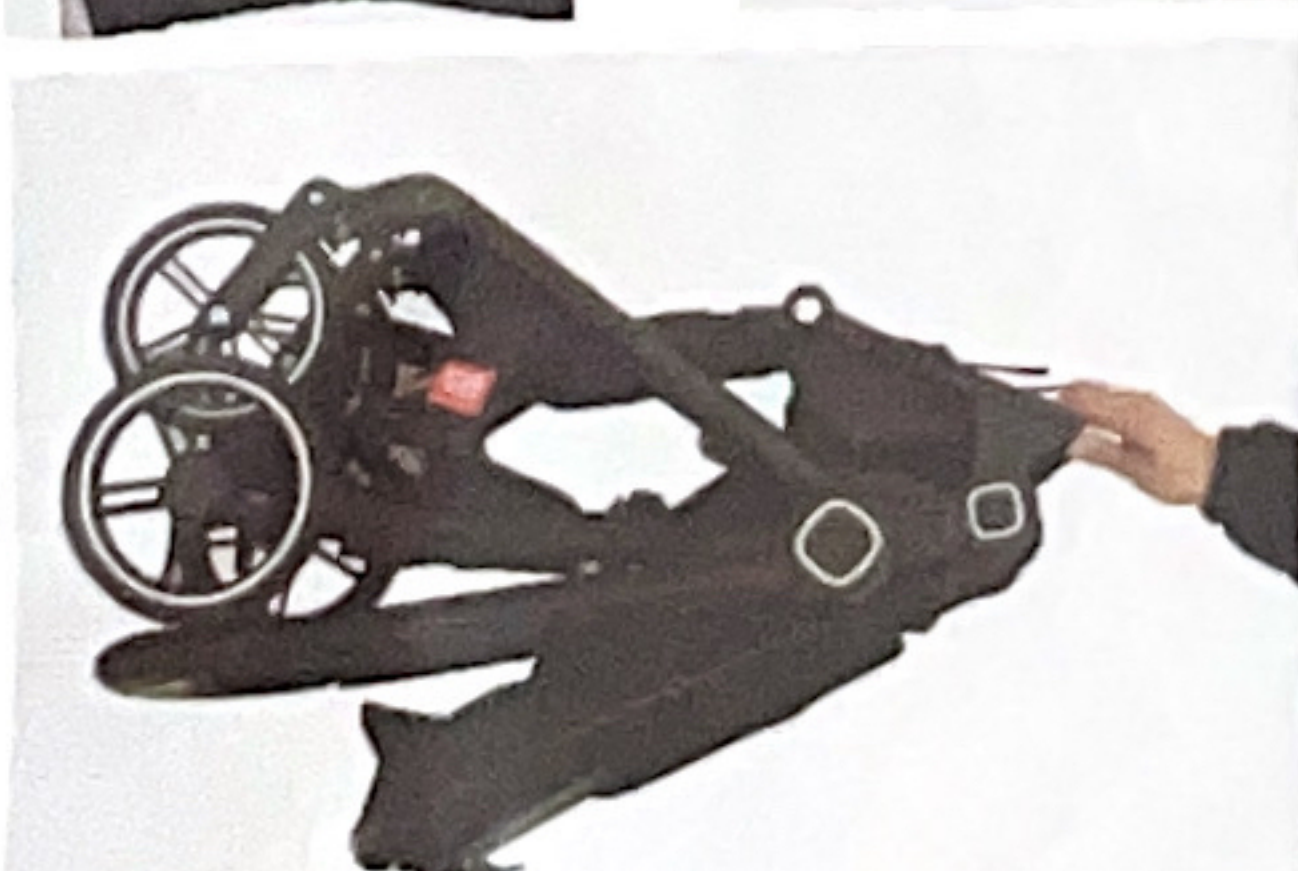

32

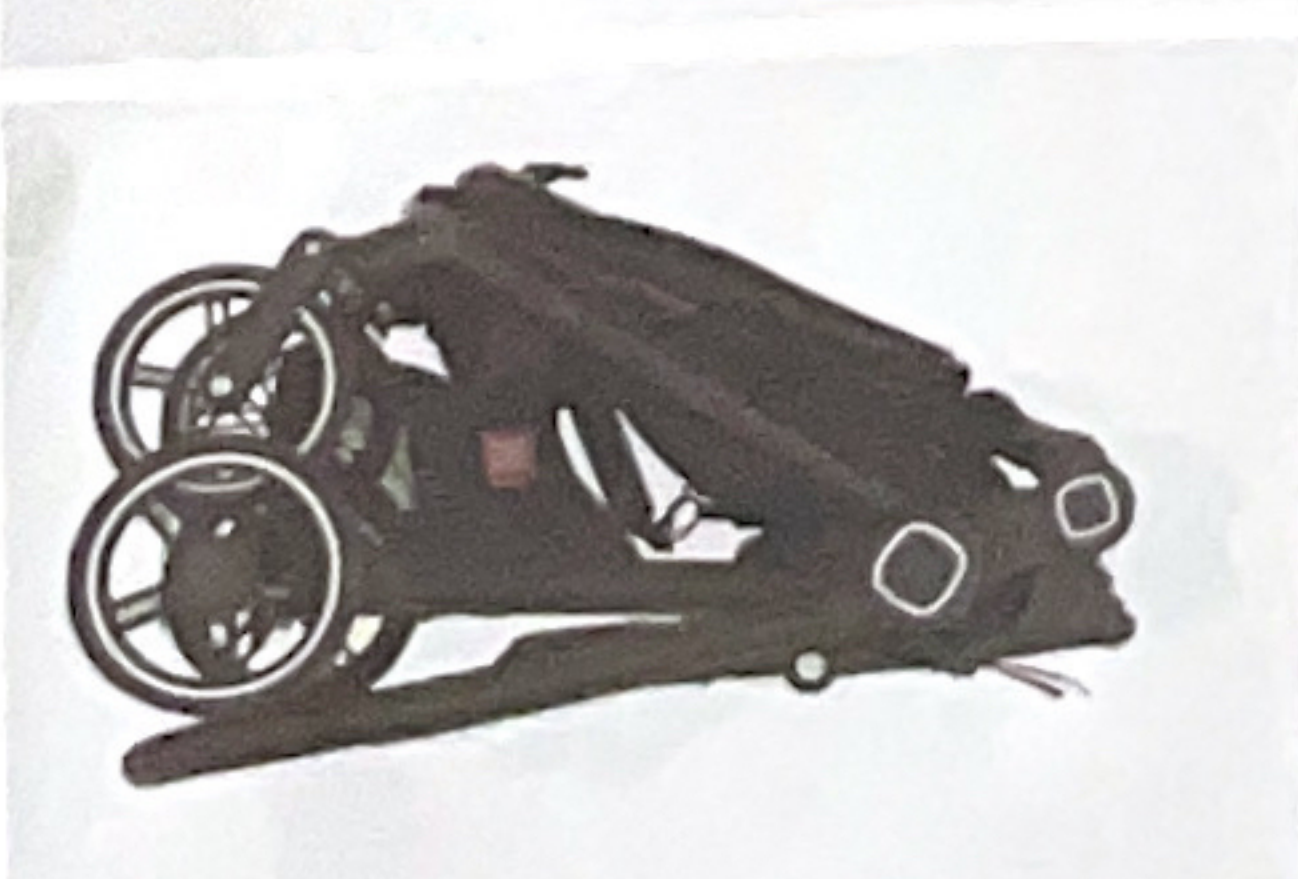

33

08



**14****SEAT REVERSE OPERATION**

1.THE OPERATION SAME AS SEAT FORWARD FOLDING OPERATION.AFTER FOLDING AS PICTURED 34.

**34****15****FORWARD,REVERSE OPEN THE FRAME**

1.ONCE REFER TO STEP 1 TO OPEN THE FRAME AND PULL THE HANDLEBARS UP UNTIL YOU HEAR "CLICK" THEN OPEN THE SEAT AND VERIFY THAT SEAT AND FRAME ARE LOCKED IN PLACE BY FOLLOWING STEP 4 ABOVE.

2.SEAT OPENS IN REVERSE SAME AS SEAT OPENS FORWARD .

**35**